



# Pagination livrets (CD et DVD) pour RÉPLICATION (> 300 ex)

## Pagination livrets CD et DVD: 4 – 8 – 12 – 16 pages

4 PAG

4	1
2	3

8 PAG


8	1
2	7
6	3
4	5

12 PAG

12	1
2	11
10	3
4	9
8	5
6	7

16 PAG

16	1
2	15
14	3
4	13
12	5
6	11
10	7
8	9

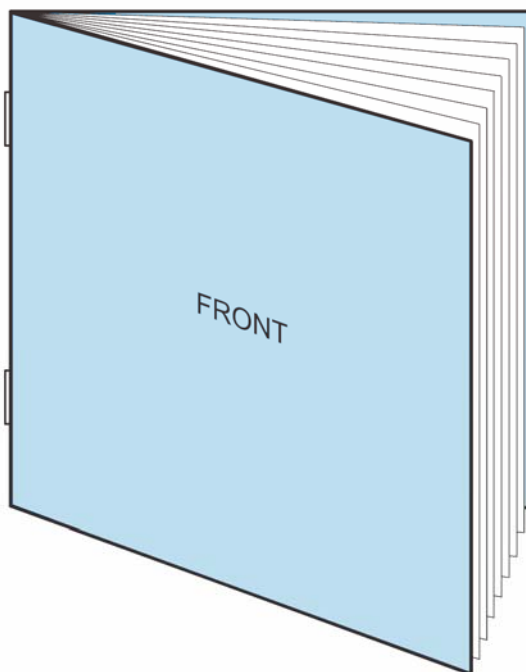

## Pagination livrets CD et DVD: 20 – 24 – 28 – 32 pages

### 20 PAG

20	1
2	19
18	3
4	17
16	5
6	15
14	7
8	13
12	9
10	11

### 24 PAG

24	1
2	23
22	3
4	21
20	5
6	19
18	7
8	17
16	9
10	15
14	11
12	13

### 28 PAG

28	1
2	27
26	3
4	25
24	5
6	23
22	7
8	21
20	9
10	19
18	11
12	17
16	13
14	15

### 32 PAG

32	1
2	31
30	3
4	29
28	5
6	27
26	7
8	25
24	9
10	23
22	11
12	21
20	13
14	19
18	15
16	17